


This document sketches out the main menus (please refer to operating manual MU 7088 EN for further information).


### USING THE BUTTONS

 - - Come back to the previous stage
  - - Increment the blinking figure
- - Choose the menu option
  - - Access to the following figure
- - Validate the displayed option
  - - Validate the entry data

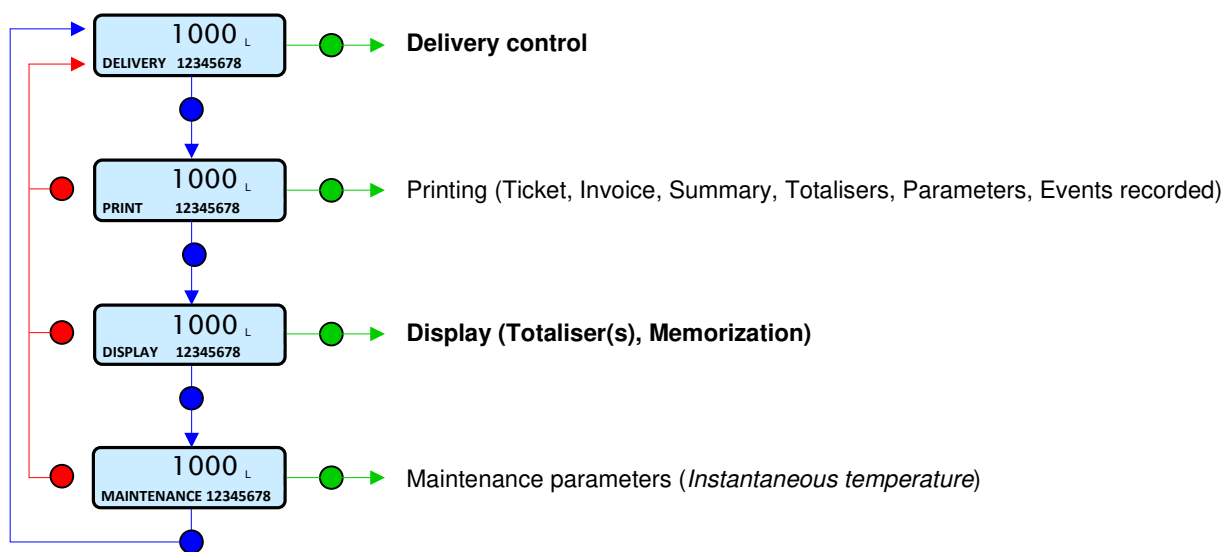


# RUN AN OPERATION: DELIVERY OR UNLOADING

## 1. PREPARE THE OPERATION




### ▲ CHOOSE THE COMPARTMENT

⚠ with at least two flaps set

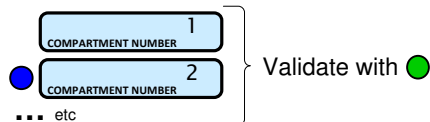


### ▲ CHOOSE THE PRODUCT

⚠ with at least two products set

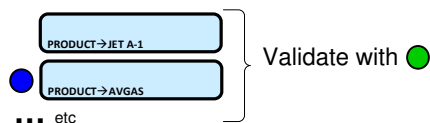


### ▲ SELECT THE DISTRIBUTION OUTLET

 ⚠ with active option



### ▲ SELECT THE DISTRIBUTION MODE

⚠ with both modes active

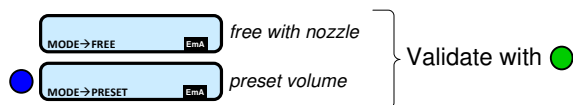

### ▲ SET THE VOLUME


⚠ with PRESET MODE




- Change the blinking figure value
- Access to the following figure
- Validate the entry data

## 2. CARRY OUT THE OPERATION

### ▲ START THE OPERATION

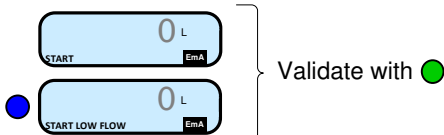

Display during the operation:

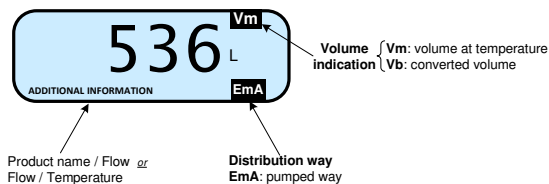

**The operation may be interrupted by several situations:**

#### ▶ APPEARANCE OF A FAULT AND DISPLAY OF AN ALARM



● Continue (§3) or end (§4) the operation

#### ▶ INTENTIONAL INTERRUPTION OF THE OPERATION



● Continue (§3) or end (§4) the operation

 
### ▲ DISPLAY DELIVERY INFORMATION



Back to normal display is automatic: **DO NOT PRESS RED STOP BUTTON TO KEEP FROM INTERRUPTING OPERATION.**


## 3. CONTINUE THE OPERATION

### ▲ CONTINUE THE OPERATION




## 4. END THE OPERATION
 
### ▲ END THE OPERATION



## 5. PRINT THE DOCUMENTS

⚠ If the AUTO PRINT option is active, this sequence is automatic.

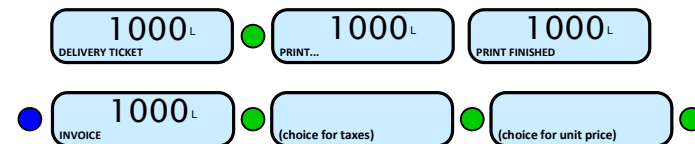

Printing of invoice  
Printing of cheque




● Back to main menu

### MEANING OF SYMBOLS

- ▲ Mandatory action
- ▲ Optional action (depends on configuration chosen)
- ▶ Event during delivery
- 👤 Action by operator

# DISPLAY THE DATA

The DISPLAY menu is available in stand-by mode or in case of an intermediate stop

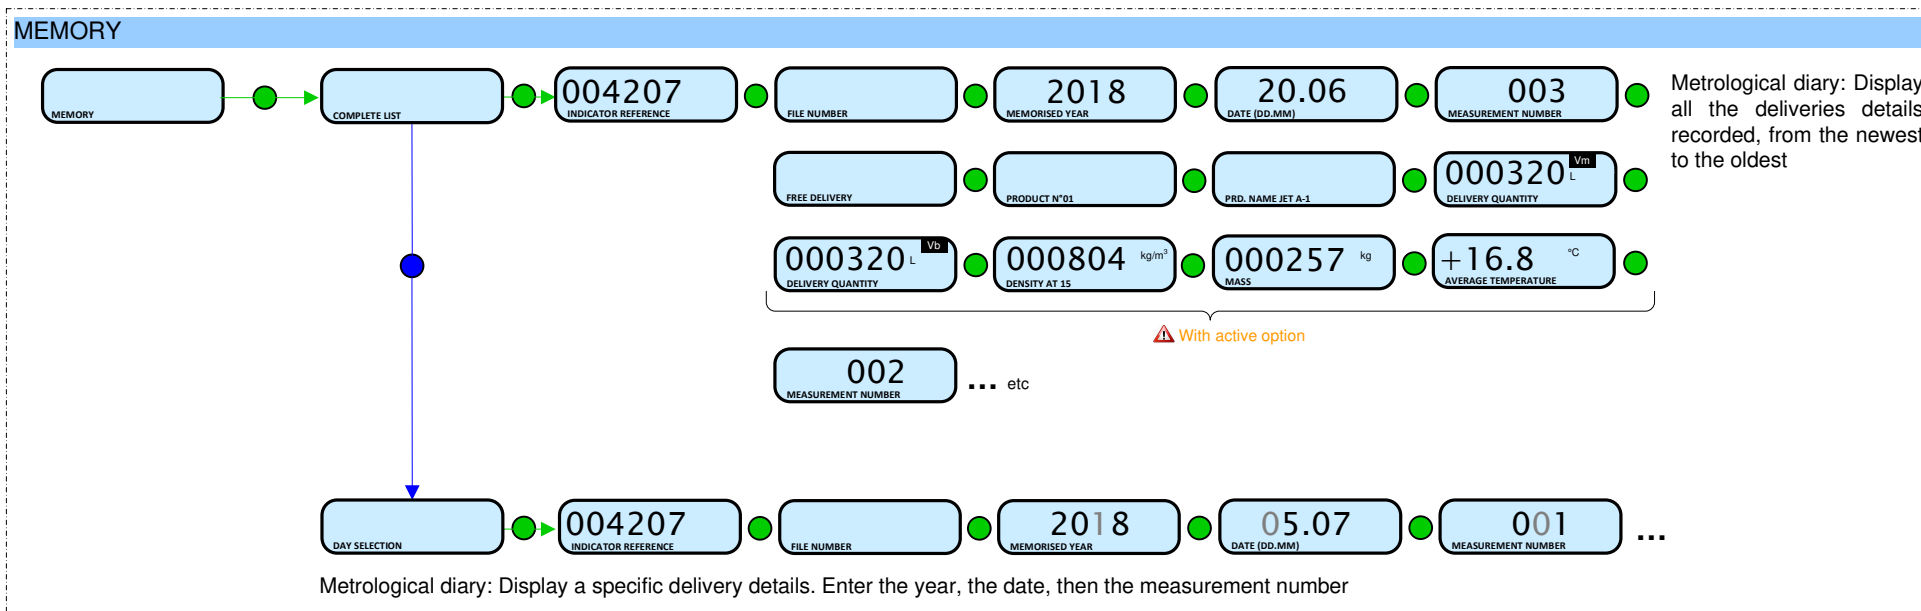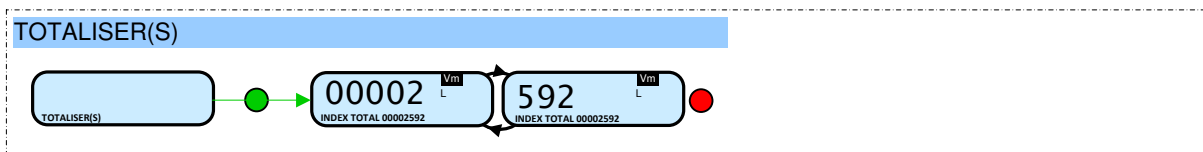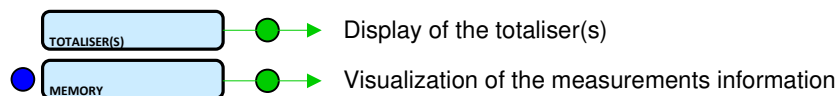

# LIST OF ALARMS

		DISPLAY	MEANING	ACTION
USER		STOP	Intentional interruption of delivery or return	Continue, stop or finish the delivery or unloading
		PRINTER DEFAULT	Communication with the printer lost Jammed paper in the printer	Check the connection cable, on-off switch and fuse Use the RELEASE button to eject paper
		POWER SUPPLY PROBLEM	Power outage during discharge	Check the cause / Restore power supply
		ZERO FLOW DEFAULT	Zero flow	Check if the pulse transmitter is powered (red indicators)
		LOW FLOW DEFAULT	Low flowrate (less than 4m <sup>3</sup> /h)	Check the parameters / Check the hydraulic system (valve, strainer, nozzle...)
		HIGH FLOW DEFAULT	High flowrate (greater than maximum flowrate)	Check the parameters / Reduce flowrate
		DIARY DEFAULT	Reset of the events diary	Acknowledge the alarm, check the date in supervisor mode (RFID key)
		INCOHERENT SIGNAL	Coherence failure in metering lines	Check the position of the manual selection valves
EMA METERING PROBLEM	Metering problem with the measuring device	Check if the pulse transmitter is powered (red indicators)		
REPARATOR		DISPLAY DEFAULT	Problem with display card	If steady alarm, substitution of the display card
		WATCHDOG DEFAULT	Fault with display or power card or AFSEC+ card	If steady alarm, substitution of the faulty card
		VOLUME CONVER DEFAULT	Problem during conversion of volume	If steady alarm, substitution of the AFSEC+ electronic card
		TOTALISER 1 LOST	Loss of totaliser	Substitution of the backup battery
		TEMPERATURE 1 DEFAULT	Temperature determination failure	If steady alarm, see a reparator for trouble shooting
	BLOCKING	MEMORY LOST (PILE)	Loss of saved memory	Substitution of the backup battery
		MEMORY LOST	Error on SIM memorization	Substitution of the backup battery
		DATE AND TIME LOST	Loss of date and time	Set date and time in supervisor mode (RFID key)
		COEFFICIENTS DEFAULT	Deviation between coefficient LF/HF greater than 0.5%	Modification of the low flow coefficient (K1)
		PROM DEFAULT	Loss of software or resident integrity	Substitution of the AFSEC+ electronic card
RAM DEFAULT	Saved memory fault	Substitution of the AFSEC+ electronic card		
EEPROM MEMORY LOST	Loss of metrological configuration	Substitution of the AFSEC+ electronic card		
MEMORY OVER LOADED	SIM memory full	Substitution of the AFSEC+ electronic card		